

此处为5V差分信号

NC	NC	NC	NC
NC	NC	NC	NC
Y0+	Y1-	Y3+	Y2-
Y0-	Y1+	Y3-	Y2+

22	NC
21	NC
20	NC
19	NC
18	NC
17	NC
16	Y15
15	Y14
14	Y13
13	Y12
12	Y11
11	Y10
10	Y7
09	Y6
08	COM1
07	Y5
06	Y4
05	Y3
04	Y2
03	Y1
02	Y0
01	COM0

MC-34MR-4MTS-F700-FX-A (220V)

 
- PLC 下载口
USB COM1
- 触摸屏下载口
- 触摸屏USB鼠标接口

电池


- 触摸屏系统按键
- PLC运行开关

01	L
02	N
03	NC

25	NC
24	NC
23	NC
22	NC
21	NC
20	COM
19	X17
18	X16
17	X15
16	X14
15	X13
14	X12
13	X11
12	X10
11	X7
10	X6
09	X5
08	X4
07	X3
06	X2
05	X1
04	X0
03	COM
02	0V
01	24V



输入属于NPN型，不需要外接电源，直接短接COM和X点即可。

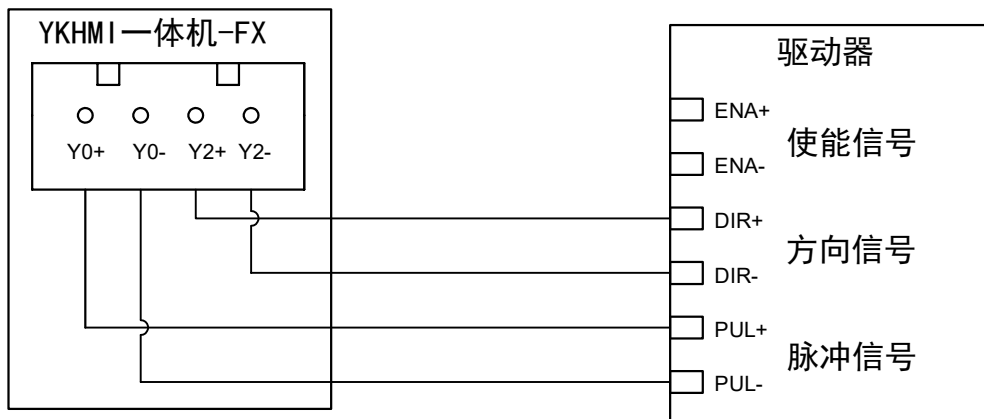

产品合格证

生产日期		检验结论	合格	检验员	
------	--	------	----	-----	--